

# SAMSUNG

## Bluetooth Power

Ensure Bluetooth is turned ON permanently.

## Discoverable/Visible

1. Go to **Menu**
2. Select **Settings** and/or **Tools**
3. Select **Bluetooth**
4. Select **Settings/Visibility**
5. Set *Discovery Mode/Visibility* to ON

## Authorize Connection

1. Go to **Menu**
2. Select **Settings** and/or **Tools**
3. Select **Bluetooth**
4. Select **HFL**
5. Set *Options* to Authorize Device

## Auto Answer

1. Go to **Menu**
2. Select **Settings** and/or **Tools**
3. Select **Call Settings**
4. Select **Auto Answer** or **Answer Options**
5. Set *Auto Answer* to OFF

## Answer Options

1. Go to **Menu**
2. Select **Settings** and/or **Tools**
3. Select **Call Settings** (on some models, select **Others**, then **Call Setup** or **Phone Settings**, then **Extra Settings**)
4. Under *Answer Options/Call Answer*, select **Flip/Slide**, **AnyKey**, **Send**, or **Auto Answer** (if available).  
Auto Answer is the preferred setting but any of these will work.